





9453 Owensmouth Ave., Chatsworth, CA 91311 USA
Phone: +1 800 377 4532 | Fax: +1 818 734 8199
currietechnology.com | izipusa.com | ezipusa.com
sales@currietechnology.com | sales@izipusa.com

Folding Instructions


1 unplug the battery, pull the locking pin (left side), then pull the battery pack out of the frame




2 fold the pedals by pushing the black portion towards the frame, then swinging it down. repeat for opposite side




3 open the seat post quick release, then lower the saddle completely





4 slide the top handlebar section down completely and lock in place

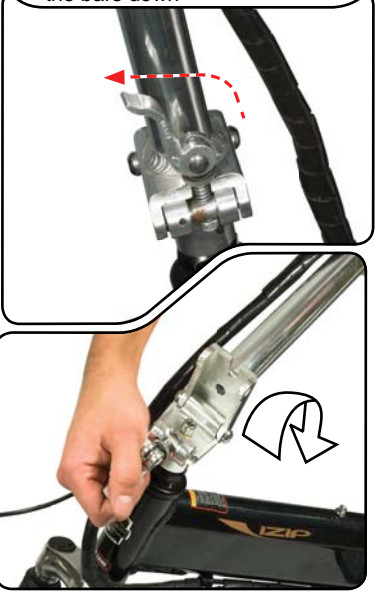

5 open the quick release securing the handlebar hinge, then fold the bars down



6 open the quick release securing the frame hinge¹, swing back the lever, then lift the pin up to fold the frame

*see owner's manual for more detailed information on all topics
¹refer to owner's manual for proper quick release adjustment