






9453 Owensmouth Ave., Chatsworth, CA 91311 USA
Phone: +1 800 377 4532 | Fax: +1 818 734 8199
currietechnology.com | izipusa.com | ezipusa.com
sales@currietechnology.com | sales@izipusa.com

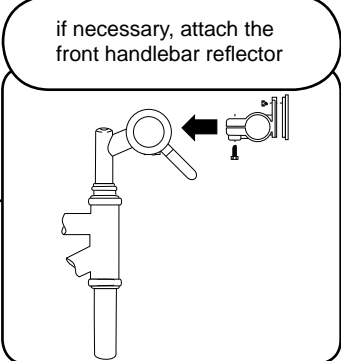
Assembly Instructions


- 1** insert the front wheel into the fork. guide the brake rotor into its slot on the caliper as shown

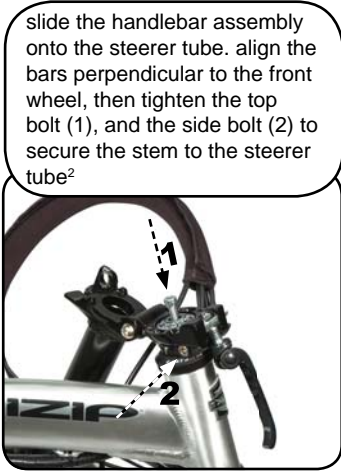

- 2** slide a washer and the fender bracket onto the axle on each side



- 3** tighten each axle nut securely (350in-lbs, 39.5 Nm). check front and rear brakes for proper operation*



- 4** if necessary, attach the front handlebar reflector



- 5** insert the top half of the handlebars into the stem. secure the quick release to lock in place¹



- 6** slide the handlebar assembly onto the steerer tube. align the bars perpendicular to the front wheel, then tighten the top bolt (1), and the side bolt (2) to secure the stem to the steerer tube²


- 7** swing the bars upright and close the quick release lever¹


- 8** insert the seat post into the seat tube, then close the quick release¹


- 9** install the pedals and tighten them (325 in-lbs, 38 Nm). the *left side pedal is reverse threaded*, the right side is standard


- 10** charge the battery for 6 hours. after the initial charge, recharge for 4-6 hours after each use



*see owner's manual for more detailed information on all topics

¹refer to owner's manual for proper quick release adjustment



²refer to owner's manual for proper headset assembly





9453 Owensmouth Ave., Chatsworth, CA 91311 USA
Phone: +1 800 377 4532 | Fax: +1 818 734 8199
currietechnology.com | izipusa.com | ezipusa.com
sales@currietechnology.com | sales@izipusa.com


Folding Instructions


- 1 use the key to unlock the battery, then lift it out of the frame





- 2 fold the pedals by pushing the black portion towards the frame, then swinging it down. repeat for opposite side


- 3 open the seat post quick release, then lower the saddle completely


- 4 slide the top handlebar section down completely and lock in place


- 5 open the quick release securing the handlebar hinge, slide the pin sideways, then fold the bars down


- 6 open the quick release securing the frame hinge, swing back the lever, then lift the pin up to fold the frame



*see owner's manual for more detailed information on all topics